

ADDISON CIRCULAR LUMINAIRE INSTRUCTIONS

Issue 02 on 2nd December 2009

THANK YOU for buying this product. To help ensure it gives complete satisfaction please install it according to these instructions and then pass the instructions to the appropriate person for retention and future reference.

SAFETY This is a mains powered product. It is designed to be installed by suitably qualified personnel only and in accordance with the applicable building and electrical regulations. Before installation or maintenance the electrical supply to the product must be isolated.

WARRANTY This product is warranted to be free of defects in materials, design and workmanship for 12 months from the date of purchase. If a suspected fault should develop in this time, please contact us at the address above.

This warranty does not extend to consumable items such as lamps and fuses.

INSTALLATION SUPPORT If installation advice or accessories are required please also contact us at the above address. We will do our best to help.

When reporting a suspected fault or seeking installation support the problem is likely to be resolved most quickly if you have full product details to-hand, as well as details of when and where it was purchased.

INSTALLATION

1. Remove the diffuser from the base by rotating anti-clockwise to unlatch then pull away.
2. Remove & discard the lamp packing piece.
3. Loosen the four gear tray retaining screws, rotate the gear tray anti-clockwise to align the screw heads with the large aperture of the keyhole slots & remove the gear tray away from the base.
4. Prepare the mains supply cable & fixing points on the chosen mounting surface ensuring it is able to retain the weight of the luminaire.
5. Pass the mains supply cable through the entry hole provided in the base, offer the base to the mounting surface & secure using the screws provided.
6. Route the mains supply cable to the terminal block on the gear tray & terminate ensuring correct polarity is observed. **WARNING: THIS LUMINAIRE MUST BE EARTHED**
It is important that supply cables to luminaires fitted with an electronic ballast do not run adjacent to leads connected to the ballast output terminals so as not to affect radio frequency interference suppression.
7. Secure the supply cable using the clamp provided on the gear tray.
8. Refit the gear tray & secure by retightening the screws.
9. Check the lamp is correctly fitted on to the lampholder.
10. Refit the diffuser & trim by placing over the base & rotating clockwise until it locks into position.
11. Reconnect power supply & check for correct operation. Luminaires fitted with electronic ballasts are exempt from insulation resistance tests as this may cause damage to the ballast.

MAINTENANCE

1. Any failed lamps should be replaced promptly to avoid irreparable damage to the luminaire.
2. Lamps should be replaced on a planned maintenance schedule.
3. Cleaning should be carried out at regular intervals so as not impair photometric performance or thermal safety of the luminaire.

WARNING: Ensure luminaire is isolated from the mains supply & suitably cooled down before carrying out any maintenance work

