

TAMPA IP65 DIE-CAST ALUMINIUM 70-150W METAL HALIDE FLOODLIGHT INSTRUCTIONS
Issue 02 on 16th December 2009

THANK YOU for buying this product. To help ensure it gives complete satisfaction please install it according to these instructions and pass them to the appropriate person for retention and future reference.

SAFETY This is a mains powered product. It is designed to be installed by suitably qualified personnel only and in accordance with the applicable building and electrical regulations. Before installation or maintenance the electrical supply to the product must be isolated.

WARRANTY This product is warranted to be free of defects in materials, design and workmanship for 12 months from the date of purchase. If a suspected fault should develop in this time please contact us at the address above. This warranty does not extend to consumable items such as lamps and fuses.

INSTALLATION SUPPORT If installation advice or accessories are required please also contact us at the above address. We will do our best to help. When reporting a suspected fault or seeking installation support the problem is likely to be resolved most quickly if you have full product details to-hand, as well as details of when and where it was purchased.

INSTALLATION

1. If the floodlight is to be wall mounted remove the mounting bracket by unfastening the fixing bolts at each side.
 - a. Use the mounting bracket to mark the position of the screw holes on the wall.
 - b. Drill the wall and fit the bracket using suitable fasteners
2. Unscrew the front cover securing screws and hinge open the front cover to expose the terminal block.
3. Using the cable gland supplied insert the mains supply cable into the body of the fitting and secure it using the cable clamp provided. To ensure that the IP65 rating is maintained it may be necessary to add some extra sealant round the cable gland.
4. Connect the cable into the terminal block ensuring correct polarity is observed and that if stranded cable is used no loose strands are left unconnected.

WARNING: THIS LUMINAIRE MUST BE EARTHED

5. If the floodlight was detached from the mounting bracket, re-attach it to the floodlight bracket
6. Insert the lamp and reclose the front cover
7. To adjust the floodlight angle loosen the bracket fixing nuts on the side, set the floodlight to the desired position and re-tighten the nuts.

MAINTENANCE

1. This product becomes very hot in use. Do not touch it or attempt maintenance till it has cooled properly.
2. Faulty lamps must be replaced immediately or damage will be caused to the fitting which will not be covered by the warranty.
3. If the front cover glass should become cracked or damaged it should be replaced immediately.

RATINGS

1. This luminaire is of class I construction and must be earthed.
2. IP65 rated suitable for external applications.
3. Not suitable for food preparation areas
4. 230V/240V AC rated

WARNING: Ensure luminaire is isolated from the mains supply & suitably cooled down before carrying out any maintenance work

